




replacement parts industries, inc.

CALL 800-221-9723 or 818-882-8611 • FAX 818-882-7028
E-MAIL: techsupport@rpiparts.com • WEBSITE: www.rpiparts.com

RPT620 PLASTIC TUBING SNAKE SERVICE TIPS


- To expose the two brass ends of the Tubing Snake, rotate the yellow fiberglass rod bundle through the holder until the ends are accessible.
- To extend the length of the yellow fiberglass rod, simply rotate the rod bundle through the Tubing Snake holder until it reaches the desired length. To return the rod to its original position inside the holder, rotate the rod in reverse direction until the two brass ends are inside the holder.
- The 3" Flexible Extension and Bullet Tip attachments are located in the yellow pouch for easy storage and access. Additional attachments can also be stored in this pouch.
- The Bullet Tip can be removed from the 3" Flexible Extension and used as an attachment by itself – see Figure 1.
- The 3" Flexible Extension can also be used in conjunction with other attachments available from RPI.
- **CAUTION:** The minimum bend radius of the yellow fiberglass rod is 2-1/2" - see Figure 2 below. Over-bending the rod can cause it to snap, and void the warranty.

FIGURE 1

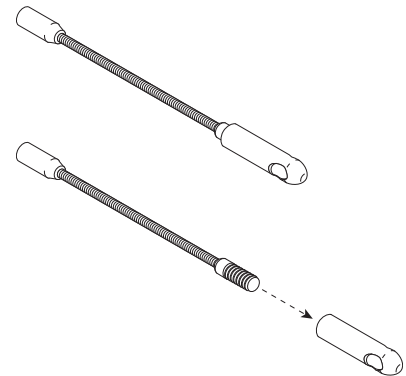

The Bullet Tip can be removed from the 3" Flexible Extension and used as an attachment by itself.

FIGURE 2

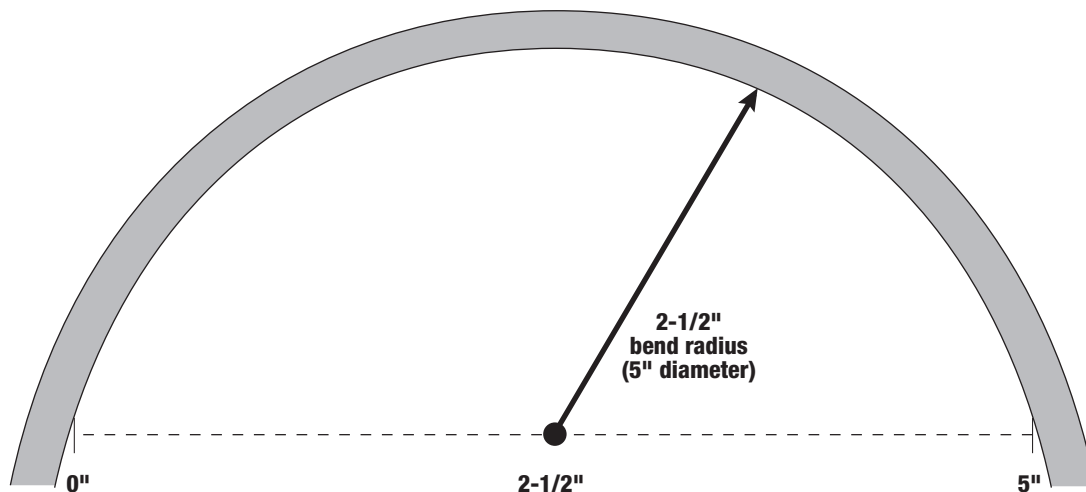

CAUTION: The minimum bend radius of the yellow fiberglass rod is 2-1/2".
Over-bending the rod can cause it to snap, and void the warranty.