



# New Parts To Fit Air Techniques, Pelton & Crane, and SciCan

## SciCan: Statim 5000

RPI Part #SCS029  
OEM Part #01-101649S




### CASSETTE SEAL, 5000


- Black Silicone
- Includes: RPS287 (4) Pouches of Liquid Soap

**Fits:** Cassette Lid

**Models:** STATIM 5000

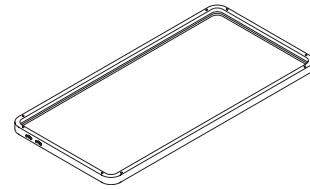

## Air Techniques: Peri-Pro I, II, & III

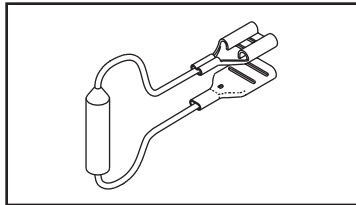


RPI Part #ATF649  
OEM Part #94278

### THERMO FUSE (98°C)

**Fits:** Peri-Pro I & II

The Peri-Pro I & II uses (OEM Part #94278)  
RPI Part#ATF649, Rated @ 98° C.

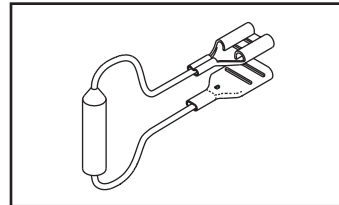

RPI Part #ATF651  
OEM Part #90278



### THERMO FUSE (109°C)

**Fits:** Peri-Pro III

The Peri-Pro III uses (OEM Part #90278)  
RPI Part #ATF651, Rated @ 109°C.

## Pelton & Crane: Chairman & Coachman

RPI Part #PCB730  
OEM Part #040988




### FOOT SWITCH ASSY. PCB

- Includes Actuator Spacer

**Fits:** Foot Switch Assy.

**Models:** Chairman 5000

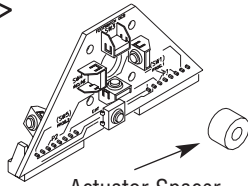

Actuator Spacer  
RPI Part# PCA726


RPI Part #PCB723  
New OEM Part #018326



### SWITCH BACK PCB ASSEMBLY

**Fits:** Chair back assembly

**Models:** Coachman

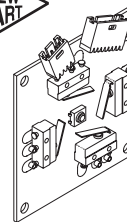


RPI Part #PCB736  
New OEM Part #94 34 424



### UP INTERCONNECT (PCB)

**Fits:** Incline/recline controls

**Models:** Chairman 5000 & 5010

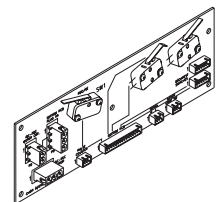

RPI Part #PCA726  
OEM Part #5428292



### ACTUATOR SPACER

- Closed Cell Neoprene
- 4 per package

**Fits:** Footswitch PCB Assy.

OEM#3040988, RPI# PCB730,

**Models:** Chairman 5000



RPI Part #PCB733  
New OEM Part #30 06 629



### LIMIT SWITCH (PCB)

**Fits:** Incline/recline and upper traverse

**Models:** Chairman 5090

